

PETKIT EVERSWEET MAX-100

Bezdrátová SMART fontánka · 3 l · senzor pohybu · až 83 dní na baterii

Průvodce čištěním / Cleaning Guide / Reinigungsanleitung

CZ

SUNNYSOFT

Přehled: části omyvatelné v myčce nádobí

PETKIT™

**CLEAN EASY.
DRINK FRESH.**
PETKIT EVERSWEET MAX 2 (CORDLESS)

**DISHWASHER
SAFE**



*The image is for creative purposes only.

Heat-resistant material 
unlocks two new cleaning options.

 **CLEAN IN A DISHWASHER** 

 **CLEAN WITH BOILING WATER** 

*To ensure your pet's drinking water is healthy, it is recommended to clean the water tank at least once a week and perform a deep cleaning once a month.

Čištění v myčce nádobí — postup

CLEAN IN A DISHWASHER

(Hands-free)

(Hassle-free)

Place the water tray, lid, filter holder, water tank, and outlet pipe in the dishwasher for cleaning.



Do's and Don'ts for Cleaning

「Do's」

- ✓ Follow the dishwasher's instructions strictly.
- ✓ Place the outlet pipe in the small cutlery basket for cleaning to prevent it from falling.


「Don'ts」

- ✗ Do not put the control module, base, wireless water pump, or filter into the dishwasher.
- ✗ If using the drying function, it is recommended that you do not select a mode that exceeds 212°F.

Čištění vroucí vodou (1/2) — demontáž a příprava


CLEAN WITH BOILING WATER (Boiling water cycle)
(Double deep cleaning)

After regular cleaning, fill the water tank with boiling water and run it on power for 5-10 minutes to clean.

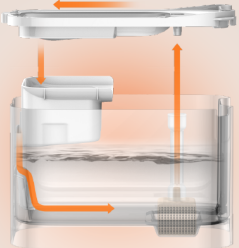

STEP 1

Rinse the lid, water tray, filter holder, water tank, outlet pipe, and wireless water pump.

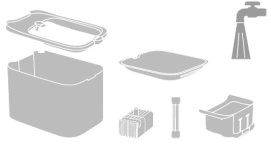




Note: Do not rinse the control module or the base; simply wipe them clean with a dry or slightly damp cloth.

STEP 2

After cleaning all the components, reassemble the water fountain, fill the water tank with boiling water (176–212°F), and run it with power for 5–10 minutes for deep cleaning.

Note: Do not put in the filter and foam filter.

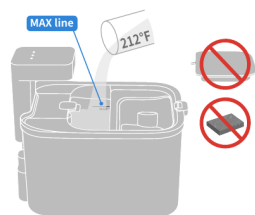


STEP 3

After cleaning, pour out the boiling water, insert the foam filter into the pump, place a new filter in position, then fill it with clean drinking water. It is ready for normal use.



Čištění vroucí vodou (2/2) — postup a sestavení

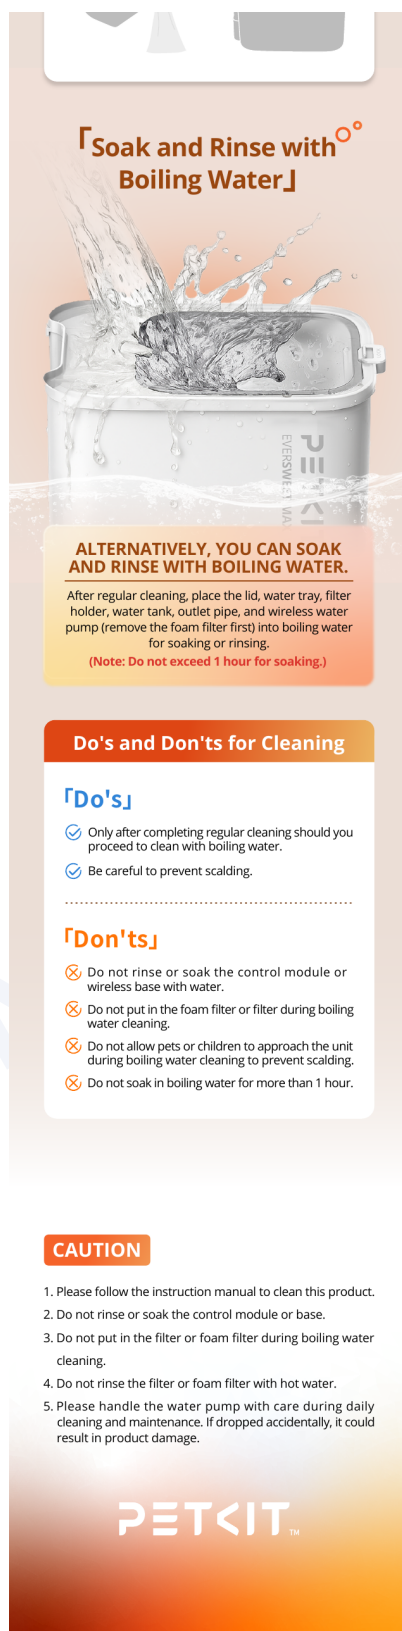

Záruční a právní informace

Výrobce: Honestar (HongKong) Technology Limited, Hongkong, Čína

Záruka: 24 měsíců

PETKIT EVERSWEET MAX-100

Bezdrôtová SMART fontánka · 3 l · senzor pohybu · až 83 dní na batérii

Průvodce čištěním / Cleaning Guide / Reinigungsanleitung

SK

SUNNYSOFT

Prehľad: časti umývateľné v umývačke riadu

PETKIT™

**CLEAN EASY.
DRINK FRESH.**
PETKIT EVERSWEET MAX 2 (CORDLESS)

**DISHWASHER
SAFE**



*The image is for creative purposes only.

Heat-resistant material 
unlocks two new cleaning options.

 **CLEAN IN A DISHWASHER** 

 **CLEAN WITH BOILING WATER** 

*To ensure your pet's drinking water is healthy, it is recommended to clean the water tank at least once a week and perform a deep cleaning once a month.

Čistenie v umývačke riadu — postup

CLEAN IN A DISHWASHER

(Hands-free)
(Hassle-free)

Place the water tray, lid, filter holder, water tank, and outlet pipe in the dishwasher for cleaning.



Do's and Don'ts for Cleaning

「Do's」

- ✓ Follow the dishwasher's instructions strictly.
- ✓ Place the outlet pipe in the small cutlery basket for cleaning to prevent it from falling.


「Don'ts」

- ✗ Do not put the control module, base, wireless water pump, or filter into the dishwasher.
- ✗ If using the drying function, it is recommended that you do not select a mode that exceeds 212°F.

Čistenie vriacou vodou (1/2) — demontáž a príprava


CLEAN WITH BOILING WATER (Boiling water cycle)
(Double deep cleaning)

After regular cleaning, fill the water tank with boiling water and run it on power for 5-10 minutes to clean.

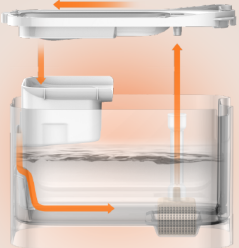

STEP 1

Rinse the lid, water tray, filter holder, water tank, outlet pipe, and wireless water pump.

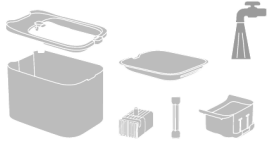



Note: Do not rinse the control module or the base; simply wipe them clean with a dry or slightly damp cloth.

STEP 2

After cleaning all the components, reassemble the water fountain, fill the water tank with boiling water (176–212°F), and run it with power for 5–10 minutes for deep cleaning.

Note: Do not put in the filter and foam filter.

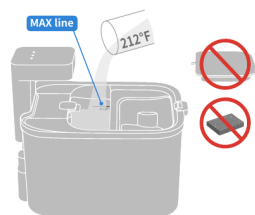


STEP 3

After cleaning, pour out the boiling water, insert the foam filter into the pump, place a new filter in position, then fill it with clean drinking water. It is ready for normal use.



Čistenie vriacou vodou (2/2) — postup a zmontovanie

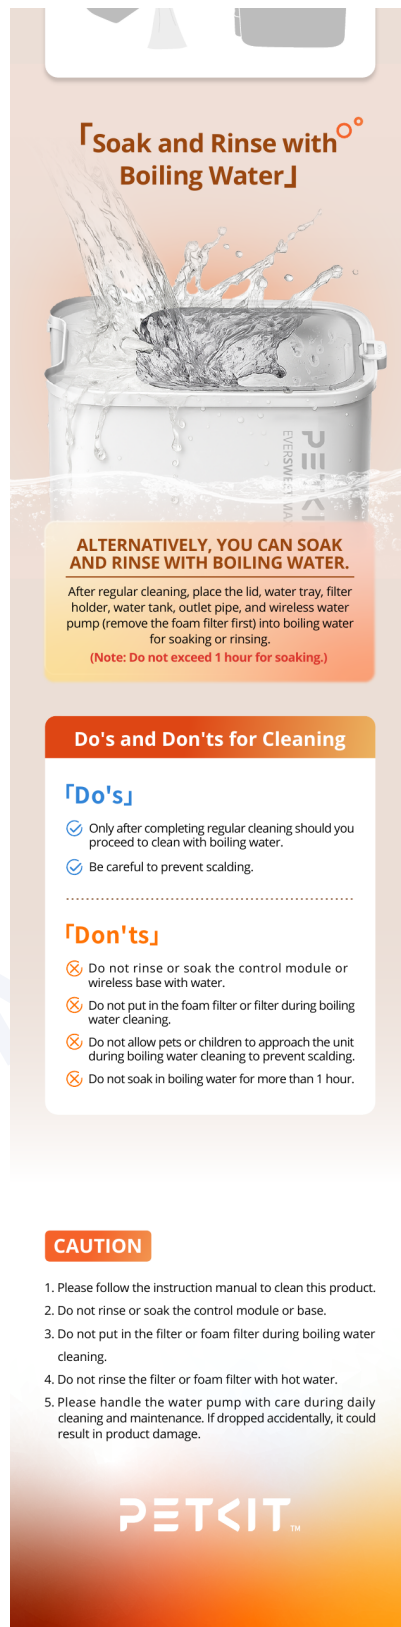

Záručné a právne informácie

Výrobca: Honestar (HongKong) Technology Limited, Hongkong, Čína

Záruka: 24 mesiacov

PETKIT EVERSWEET MAX-100

Kabellose SMART-Trinkfontäne · 3 l · Bewegungssensor · bis 83 Tage Akkulaufzeit

Průvodce čištěním / Cleaning Guide / Reinigungsanleitung

DE

SUNNYSOFT

Übersicht: spülmaschinenfeste Teile

PETKIT™

**CLEAN EASY.
DRINK FRESH.**
PETKIT EVERSWEET MAX 2 (CORDLESS)

**DISHWASHER
SAFE**



*The image is for creative purposes only.

Heat-resistant material 
unlocks two new cleaning options.

 **CLEAN IN A DISHWASHER** 

 **CLEAN WITH BOILING WATER** 

*To ensure your pet's drinking water is healthy, it is recommended to clean the water tank at least once a week and perform a deep cleaning once a month.

Reinigung in der Spülmaschine — Vorgehensweise

CLEAN IN A DISHWASHER

(Hands-free)

(Hassle-free)

Place the water tray, lid, filter holder, water tank, and outlet pipe in the dishwasher for cleaning.



Do's and Don'ts for Cleaning

「Do's」

- ✓ Follow the dishwasher's instructions strictly.
- ✓ Place the outlet pipe in the small cutlery basket for cleaning to prevent it from falling.


「Don'ts」

- ✗ Do not put the control module, base, wireless water pump, or filter into the dishwasher.
- ✗ If using the drying function, it is recommended that you do not select a mode that exceeds 212°F.

Reinigung mit kochendem Wasser (1/2) — Demontage und Vorbereitung


CLEAN WITH BOILING WATER (Boiling water cycle)
(Double deep cleaning)

After regular cleaning, fill the water tank with boiling water and run it on power for 5-10 minutes to clean.

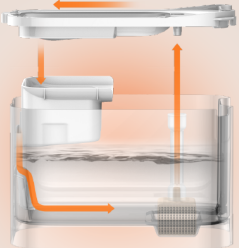

STEP 1

Rinse the lid, water tray, filter holder, water tank, outlet pipe, and wireless water pump.

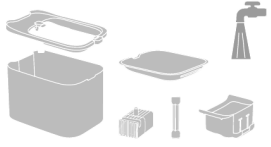



Note: Do not rinse the control module or the base; simply wipe them clean with a dry or slightly damp cloth.

STEP 2

After cleaning all the components, reassemble the water fountain, fill the water tank with boiling water (176–212°F), and run it with power for 5–10 minutes for deep cleaning.

Note: Do not put in the filter and foam filter.

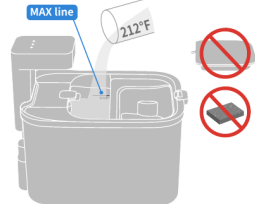


STEP 3

After cleaning, pour out the boiling water, insert the foam filter into the pump, place a new filter in position, then fill it with clean drinking water. It is ready for normal use.



Reinigung mit kochendem Wasser (2/2) — Vorgehensweise und Zusammenbau

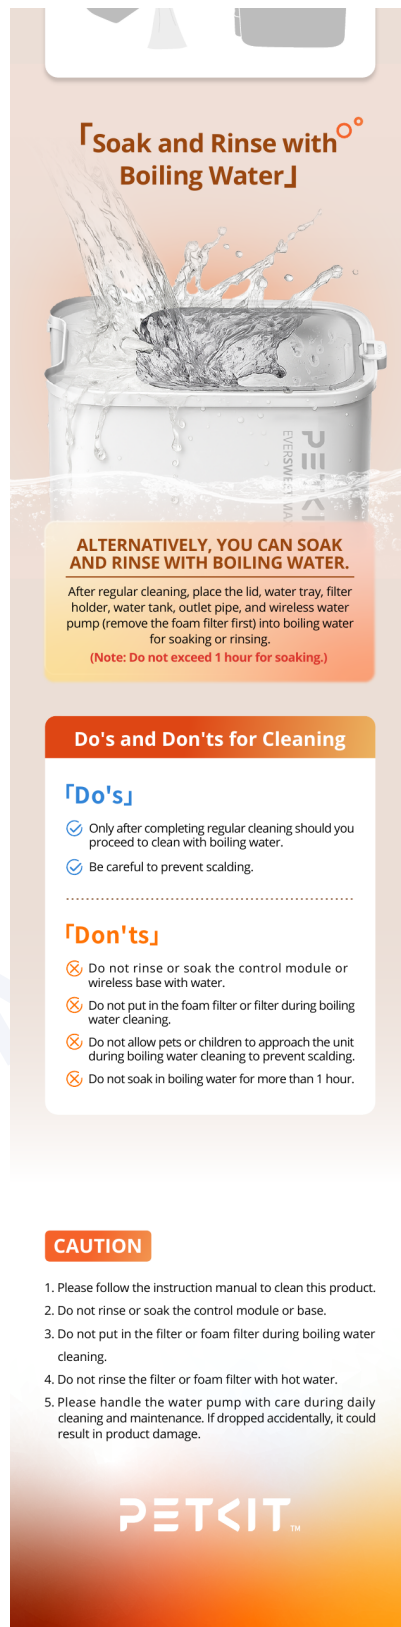

Garantie- und Rechtsinformationen

Hersteller: Honestar (HongKong) Technology Limited, Hongkong, Čína

Garantie: 24 Monate

PETKIT EVERSWEET MAX-100

Bezprzewodowa fontanna SMART · 3 l · czujnik ruchu · do 83 dni na baterii

Průvodce čištěním / Cleaning Guide / Reinigungsanleitung

PL

SUNNYSOFT

Przegląd: części nadające się do mycia w zmywarce



PETKIT™

**CLEAN EASY.
DRINK FRESH.**

PETKIT EVERSWEET MAX 2 (CORDLESS)

**DISHWASHER
SAFE**

**PETKIT
EVERSWEET MAX 2**

*The image is for creative purposes only.

Heat-resistant material 
unlocks two new cleaning options.

 **CLEAN IN A DISHWASHER** 

 **CLEAN WITH BOILING WATER** 

*To ensure your pet's drinking water is healthy, it is recommended to clean the water tank at least once a week and perform a deep cleaning once a month.

Mycie w zmywarce — procedura

CLEAN IN A DISHWASHER

(Hands-free)
(Hassle-free)

Place the water tray, lid, filter holder, water tank, and outlet pipe in the dishwasher for cleaning.



Do's and Don'ts for Cleaning

「Do's」

- ✓ Follow the dishwasher's instructions strictly.
- ✓ Place the outlet pipe in the small cutlery basket for cleaning to prevent it from falling.


「Don'ts」

- ✗ Do not put the control module, base, wireless water pump, or filter into the dishwasher.
- ✗ If using the drying function, it is recommended that you do not select a mode that exceeds 212°F.

Czyszczenie wrzącą wodą (1/2) — demontaż i przygotowanie


CLEAN WITH BOILING WATER (Boiling water cycle)
(Double deep cleaning)

After regular cleaning, fill the water tank with boiling water and run it on power for 5-10 minutes to clean.

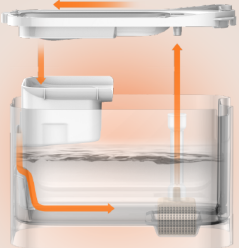

STEP 1

Rinse the lid, water tray, filter holder, water tank, outlet pipe, and wireless water pump.

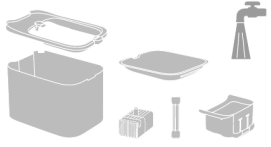



Note: Do not rinse the control module or the base; simply wipe them clean with a dry or slightly damp cloth.

STEP 2

After cleaning all the components, reassemble the water fountain, fill the water tank with boiling water (176–212°F), and run it with power for 5–10 minutes for deep cleaning.

Note: Do not put in the filter and foam filter.

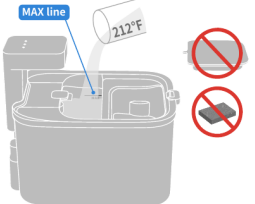


STEP 3

After cleaning, pour out the boiling water, insert the foam filter into the pump, place a new filter in position, then fill it with clean drinking water. It is ready for normal use.



Czyszczenie wrzącą wodą (2/2) — procedura i montaż

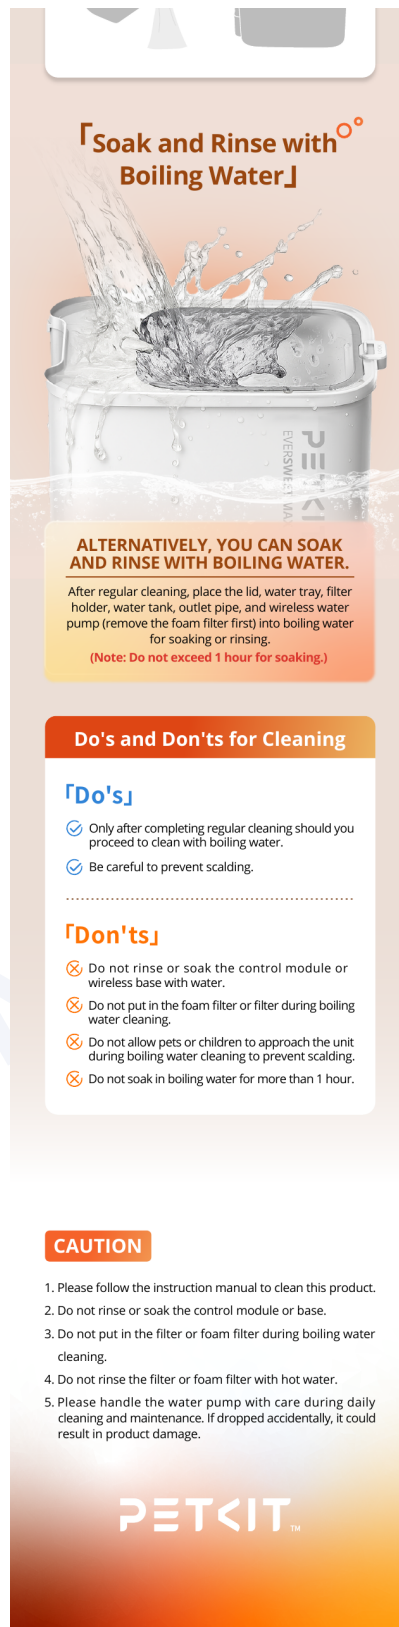

Informacje gwarancyjne i prawne

Producent: Honestar (HongKong) Technology Limited, Hongkong, Čína

Gwarancja: 24 miesiące

PETKIT EVERSWEET MAX-100

Vezeték nélküli SMART ivókút · 3 l · mozgásérzékelő · akár 83 nap akkumulátoron

Průvodce čištěním / Cleaning Guide / Reinigungsanleitung

HU

SUNNYSOFT

Áttekintés: mosogatógépben mosható alkatrészek

PETKIT™

**CLEAN EASY.
DRINK FRESH.**
PETKIT EVERSWEET MAX 2 (CORDLESS)

**DISHWASHER
SAFE**



*The image is for creative purposes only.

Heat-resistant material 
unlocks two new cleaning options.

 **CLEAN IN A DISHWASHER** 

 **CLEAN WITH BOILING WATER** 

*To ensure your pet's drinking water is healthy, it is recommended to clean the water tank at least once a week and perform a deep cleaning once a month.

Mosogatógépes tisztítás — eljárás

CLEAN IN A DISHWASHER

(Hands-free)
(Hassle-free)

Place the water tray, lid, filter holder, water tank, and outlet pipe in the dishwasher for cleaning.



Do's and Don'ts for Cleaning

「Do's」

- ✓ Follow the dishwasher's instructions strictly.
- ✓ Place the outlet pipe in the small cutlery basket for cleaning to prevent it from falling.


「Don'ts」

- ✗ Do not put the control module, base, wireless water pump, or filter into the dishwasher.
- ✗ If using the drying function, it is recommended that you do not select a mode that exceeds 212°F.

Forrásban lévő vizes tisztítás (1/2) — szétszerelés és előkészítés


CLEAN WITH BOILING WATER (Boiling water cycle)
(Double deep cleaning)

After regular cleaning, fill the water tank with boiling water and run it on power for 5-10 minutes to clean.

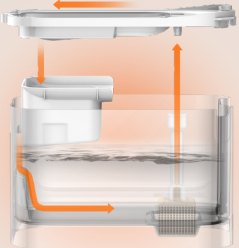

STEP 1

Rinse the lid, water tray, filter holder, water tank, outlet pipe, and wireless water pump.

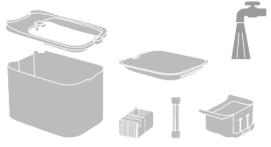


Note: Do not rinse the control module or the base; simply wipe them clean with a dry or slightly damp cloth.

STEP 2

After cleaning all the components, reassemble the water fountain, fill the water tank with boiling water (176–212°F), and run it with power for 5–10 minutes for deep cleaning.

Note: Do not put in the filter and foam filter.

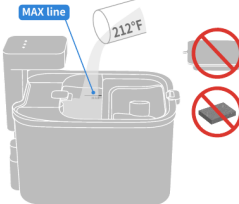


STEP 3

After cleaning, pour out the boiling water, insert the foam filter into the pump, place a new filter in position, then fill it with clean drinking water. It is ready for normal use.



Forrásban lévő vizes tisztítás (2/2) — eljárás és összeszerelés

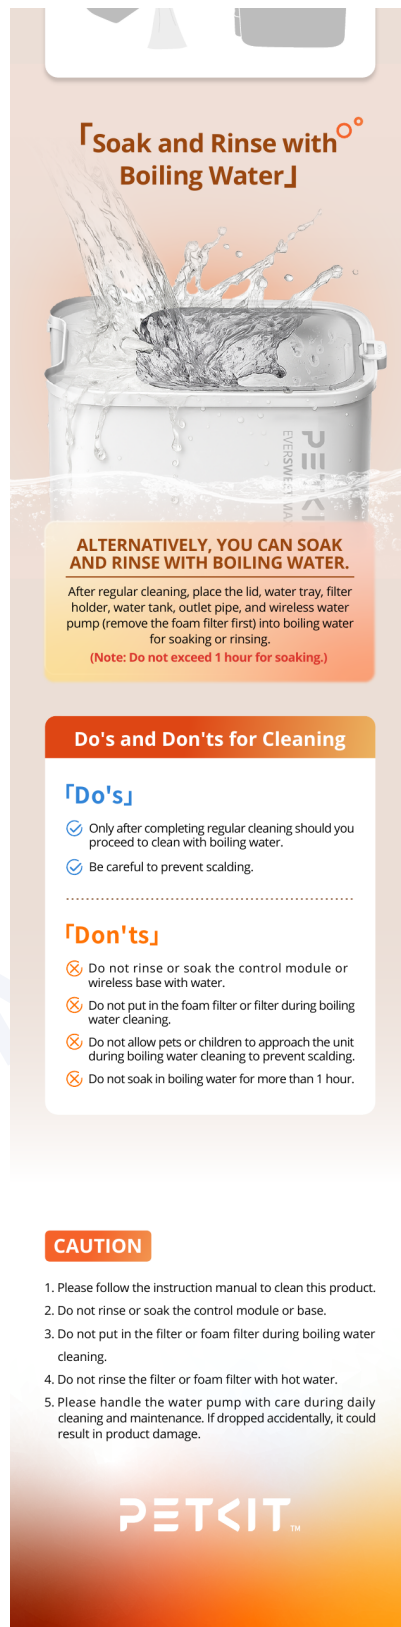

Jótállási és jogi információk

Gyártó: Honestar (HongKong) Technology Limited, Hongkong, Čína

Jótállás: 24 hónap

PETKIT EVERSWEET MAX-100

Fântână SMART fără fir · 3 l · senzor de mișcare · până la 83 de zile pe baterie

Průvodce čištěním / Cleaning Guide / Reinigungsanleitung

RO

SUNNYSOFT

Prezentare generală: piese lavabile în mașina de spălat vase

PETKIT™

**CLEAN EASY.
DRINK FRESH.**
PETKIT EVERSWEET MAX 2 (CORDLESS)

**DISHWASHER
SAFE**



*The image is for creative purposes only.

Heat-resistant material 
unlocks two new cleaning options.

 **CLEAN IN A DISHWASHER** 

 **CLEAN WITH BOILING WATER** 

*To ensure your pet's drinking water is healthy, it is recommended to clean the water tank at least once a week and perform a deep cleaning once a month.

Curățare în mașina de spălat vase — procedură

CLEAN IN A DISHWASHER

(Hands-free)
(Hassle-free)

Place the water tray, lid, filter holder, water tank, and outlet pipe in the dishwasher for cleaning.



Do's and Don'ts for Cleaning

「Do's」

- ✓ Follow the dishwasher's instructions strictly.
- ✓ Place the outlet pipe in the small cutlery basket for cleaning to prevent it from falling.


「Don'ts」

- ✗ Do not put the control module, base, wireless water pump, or filter into the dishwasher.
- ✗ If using the drying function, it is recommended that you do not select a mode that exceeds 212°F.

Curățare cu apă clocotită (1/2) — dezasamblare și pregătire


CLEAN WITH BOILING WATER (Boiling water cycle)
(Double deep cleaning)

After regular cleaning, fill the water tank with boiling water and run it on power for 5-10 minutes to clean.

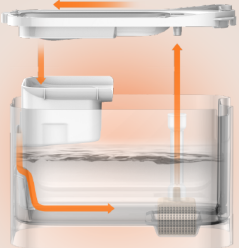

STEP 1

Rinse the lid, water tray, filter holder, water tank, outlet pipe, and wireless water pump.

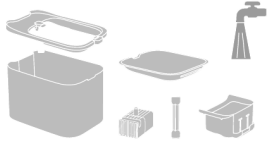




Note: Do not rinse the control module or the base; simply wipe them clean with a dry or slightly damp cloth.

STEP 2

After cleaning all the components, reassemble the water fountain, fill the water tank with boiling water (176–212°F), and run it with power for 5–10 minutes for deep cleaning.

Note: Do not put in the filter and foam filter.

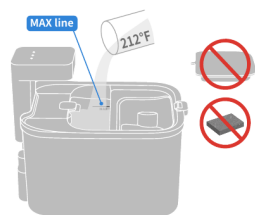

STEP 3

After cleaning, pour out the boiling water, insert the foam filter into the pump, place a new filter in position, then fill it with clean drinking water. It is ready for normal use.



Curățare cu apă clocotită (2/2) — procedură și asamblare



「Soak and Rinse with Boiling Water」

ALTERNATIVELY, YOU CAN SOAK AND RINSE WITH BOILING WATER.

After regular cleaning, place the lid, water tray, filter holder, water tank, outlet pipe, and wireless water pump (remove the foam filter first) into boiling water for soaking or rinsing.

(Note: Do not exceed 1 hour for soaking.)

Do's and Don'ts for Cleaning

「Do's」

- ✓ Only after completing regular cleaning should you proceed to clean with boiling water.
- ✓ Be careful to prevent scalding.

「Don'ts」

- ✗ Do not rinse or soak the control module or wireless base with water.
- ✗ Do not put in the foam filter or filter during boiling water cleaning.
- ✗ Do not allow pets or children to approach the unit during boiling water cleaning to prevent scalding.
- ✗ Do not soak in boiling water for more than 1 hour.

CAUTION

1. Please follow the instruction manual to clean this product.
2. Do not rinse or soak the control module or base.
3. Do not put in the filter or foam filter during boiling water cleaning.
4. Do not rinse the filter or foam filter with hot water.
5. Please handle the water pump with care during daily cleaning and maintenance. If dropped accidentally, it could result in product damage.

PETKIT™

Informații de garanție și juridice

Producător: Honestar (HongKong) Technology Limited, Hongkong, China

Garanție: 24 luni

PETKIT EVERSWEET MAX-100

Безжична SMART фонтана · 3 л · сензор за движение · до 83 дни на батерия

Průvodce čištěním / Cleaning Guide / Reinigungsanleitung

BG

SUNNYSOFT

Преглед: части, подходящи за миялна машина

PETKIT™

**CLEAN EASY.
DRINK FRESH.**
PETKIT EVERSWEET MAX 2 (CORDLESS)

**DISHWASHER
SAFE**



*The image is for creative purposes only.

Heat-resistant material 
unlocks two new cleaning options.

 **CLEAN IN A DISHWASHER** 

 **CLEAN WITH BOILING WATER** 

*To ensure your pet's drinking water is healthy, it is recommended to clean the water tank at least once a week and perform a deep cleaning once a month.

Почистване в миялна машина — процедура

CLEAN IN A DISHWASHER

(Hands-free)
(Hassle-free)

Place the water tray, lid, filter holder, water tank, and outlet pipe in the dishwasher for cleaning.



Do's and Don'ts for Cleaning

「Do's」

- ✓ Follow the dishwasher's instructions strictly.
- ✓ Place the outlet pipe in the small cutlery basket for cleaning to prevent it from falling.


「Don'ts」

- ✗ Do not put the control module, base, wireless water pump, or filter into the dishwasher.
- ✗ If using the drying function, it is recommended that you do not select a mode that exceeds 212°F.

Почистване с вряща вода (1/2) — демонтаж и подготовка


CLEAN WITH BOILING WATER (Boiling water cycle)
(Double deep cleaning)

After regular cleaning, fill the water tank with boiling water and run it on power for 5-10 minutes to clean.

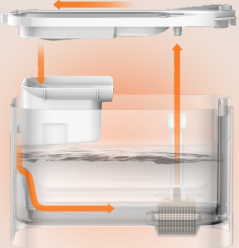

STEP 1

Rinse the lid, water tray, filter holder, water tank, outlet pipe, and wireless water pump.

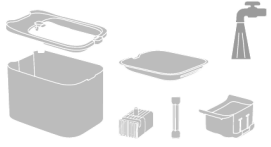




Note: Do not rinse the control module or the base; simply wipe them clean with a dry or slightly damp cloth.

STEP 2

After cleaning all the components, reassemble the water fountain, fill the water tank with boiling water (176–212°F), and run it with power for 5–10 minutes for deep cleaning.

Note: Do not put in the filter and foam filter.

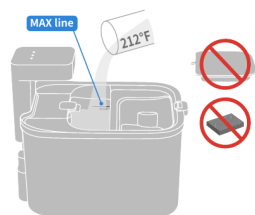

STEP 3


After cleaning, pour out the boiling water, insert the foam filter into the pump, place a new filter in position, then fill it with clean drinking water. It is ready for normal use.



Почистване с вряща вода (2/2) — процедура и монтаж



「Soak and Rinse with Boiling Water」

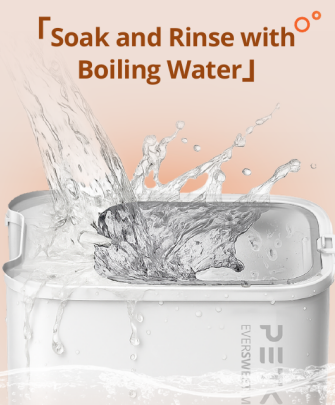

ALTERNATIVELY, YOU CAN SOAK AND RINSE WITH BOILING WATER.

After regular cleaning, place the lid, water tray, filter holder, water tank, outlet pipe, and wireless water pump (remove the foam filter first) into boiling water for soaking or rinsing.

(Note: Do not exceed 1 hour for soaking.)

Do's and Don'ts for Cleaning

「Do's」

- ✓ Only after completing regular cleaning should you proceed to clean with boiling water.
- ✓ Be careful to prevent scalding.

「Don'ts」

- ✗ Do not rinse or soak the control module or wireless base with water.
- ✗ Do not put in the foam filter or filter during boiling water cleaning.
- ✗ Do not allow pets or children to approach the unit during boiling water cleaning to prevent scalding.
- ✗ Do not soak in boiling water for more than 1 hour.

CAUTION

1. Please follow the instruction manual to clean this product.
2. Do not rinse or soak the control module or base.
3. Do not put in the filter or foam filter during boiling water cleaning.
4. Do not rinse the filter or foam filter with hot water.
5. Please handle the water pump with care during daily cleaning and maintenance. If dropped accidentally, it could result in product damage.

PETKIT™

Гаранционна и правна информация

Производител: Honestar (HongKong) Technology Limited, Hongkong, Čína

Гаранция: 24 месеца

PETKIT EVERSWEET MAX-100

Brezžična SMART fontana · 3 l · senzor gibanja · do 83 dni na bateriji

Průvodce čištěním / Cleaning Guide / Reinigungsanleitung

SI

SUNNYSOFT

Pregled: deli, ki jih je mogoče prati v pomivalnem stroju

PETKIT™

**CLEAN EASY.
DRINK FRESH.**
PETKIT EVERSWEET MAX 2 (CORDLESS)

**DISHWASHER
SAFE**



*The image is for creative purposes only.

Heat-resistant material 
unlocks two new cleaning options.

 **CLEAN IN A DISHWASHER** 

 **CLEAN WITH BOILING WATER** 

*To ensure your pet's drinking water is healthy, it is recommended to clean the water tank at least once a week and perform a deep cleaning once a month.

Čiščenje v pomivalnem stroju — postopek

CLEAN IN A DISHWASHER

(Hands-free)
(Hassle-free)

Place the water tray, lid, filter holder, water tank, and outlet pipe in the dishwasher for cleaning.



Do's and Don'ts for Cleaning

「Do's」

- ✓ Follow the dishwasher's instructions strictly.
- ✓ Place the outlet pipe in the small cutlery basket for cleaning to prevent it from falling.


「Don'ts」

- ✗ Do not put the control module, base, wireless water pump, or filter into the dishwasher.
- ✗ If using the drying function, it is recommended that you do not select a mode that exceeds 212°F.

Čiščenje z vrelo vodo (1/2) — razstavljanje in priprava


CLEAN WITH BOILING WATER (Boiling water cycle)
(Double deep cleaning)

After regular cleaning, fill the water tank with boiling water and run it on power for 5-10 minutes to clean.

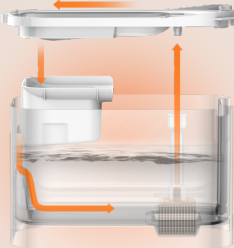

STEP 1

Rinse the lid, water tray, filter holder, water tank, outlet pipe, and wireless water pump.

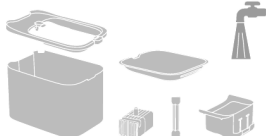



Note: Do not rinse the control module or the base; simply wipe them clean with a dry or slightly damp cloth.

STEP 2

After cleaning all the components, reassemble the water fountain, fill the water tank with boiling water (176–212°F), and run it with power for 5–10 minutes for deep cleaning.

Note: Do not put in the filter and foam filter.

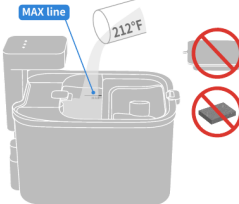


STEP 3

After cleaning, pour out the boiling water, insert the foam filter into the pump, place a new filter in position, then fill it with clean drinking water. It is ready for normal use.



Čiščenje z vrelo vodo (2/2) — postopek in sestavljanje

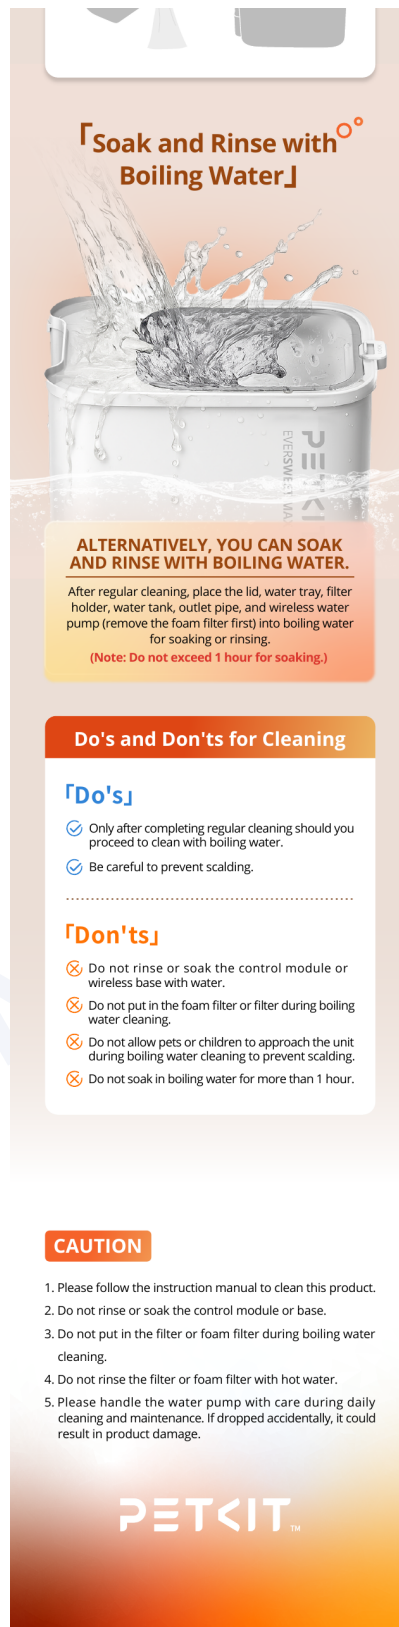

Garancija in pravne informacije

Proizvajalec: Honestar (HongKong) Technology Limited, Hongkong, Čína

Garancija: 24 mesecev